

正面



User Manual 雷神机械键盘 使用说明书

使用本产品前请仔细阅读说明书, 妥善保存以备参考。 Please read the instructions carefully before using this product and keep it well for referen.

产品规格

Table with 2 columns: Product Type, Model, Cable Length, Interface, Compatibility, Dimensions, Weight.

产品特点

- Cherry MX mechanical switches with 5000 clicks... 6-key rollover... adjustable backlighting... no macro recording required.

包装内容

雷神键盘*1、说明书*1、保修卡*1、合格证*1

1

系统需求

Windows XP / Vista / Win 7 / Win 8 / Win 10 / Mac OS

产品安装

即插即用: 只需将键盘连接到可用的计算机USB端口

键盘功能

Table with 2 columns: Activation Method, Function Description. Lists Fn+F6 (Game mode), Fn+F7 (Mute), Fn+F8 (Volume Down), Fn+F9 (Volume Up), Fn+F10 (Play/Pause), Fn+F11 (Previous Track).

2

Diagram showing Fn+F12 (Next Track), Fn+Ins (Switch to 6-Key Rollover), Fn+Del (Switch to N-Key Rollover), Fn+Home (Instant Macro Recording).

即时宏录制

步骤1: 按下FN+F6, 开启Windows按键锁... 步骤2: 按下FN+Home, "G"指示灯将会快闪... 步骤3: 指定要保存宏的按键... 步骤4: 选择FN以外的按键... 步骤5: 按下FN+Home, 完成即时宏录制.

3

Diagram showing Fn+Up (Increase brightness), Fn+Down (Decrease brightness), Fn+Left (Backlight mode), Fn+Right (Backlight mode), Fn+Win (Game mode lock), Fn+Esc (Hold 3s), B+L (Factory reset).

《废弃电器电子产品回收处理管理条例》

雷神倡导环保和低碳的消费体验, 建议拥有该产品的用户在不需要此产品时, 应遵守国家废弃电器电子产品回收处理相关法律法规...

4

背面

有害物质或元素名称及含量

Table with 2 columns: Component Name, Content. Lists PCB components and housing/attachments.

本表格依据SJ/T 11364的规定编制... 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下...

5

Specifications

Table with 2 columns: Genre, Model, Cable Length, Interface, Operational system, Dimensions, Weight.

Features

- Cherry MX switches rated at 50-million keystrokes... 6-NKRO(Default)/Full-NKRO switching... Lighting effect adjustment... No drive instant macro recording.

Package Contents

Keyboard*1、Quick Start Guide*1、Warranty card*1、Qualified Certificate*1

6

System Requirements

PC with available USB port Windows XP / Vista / Win 7 / Win 8 / Win 10 / Mac OS

Installation

Plug and play, Simply connect the keyboard to an available USB port

Keyboard function

Table with 2 columns: Hotkey, Description. Lists Fn+F6 (Game mode), Fn+F7 (Mute), Fn+F8 (Volume Down), Fn+F9 (Volume Up), Fn+F10 (Play/Pause), Fn+F11 (Previous Track).

7

Diagram showing Fn+F12 (Next Track), Fn+Ins (Switch to 6-Key Rollover), Fn+Del (Switch to N-Key Rollover), Fn+Home (Instant Macro Recording).

Instant Macro Recording

Step 1: Press FN+F6, Turn on the Windows key lock... Step 2: Press FN+Home, "G" indicator will flashing... Step 3: Assign a key you want to save macro... Step 4: Select a key other than Fn and Type key... Step 5: Press FN+Home, finish instant macro record.

8

Text describing macro key restoration and backlight mode adjustment. Includes diagrams for Fn+Up, Fn+Down, Fn+Left, Fn+Right, Fn+Win, B+L.

9

Diagram showing Fn+Esc (Profile restore) and B+L (Factory data reset).

This product must not be disposed of with your other household waste or treat them in compliance with the local regulations...

10